


SBS-Two Bolt Clamp Seatpost Installation Instructions

Published – Mar, 2011. ZS034B.v4 © Full Speed Ahead

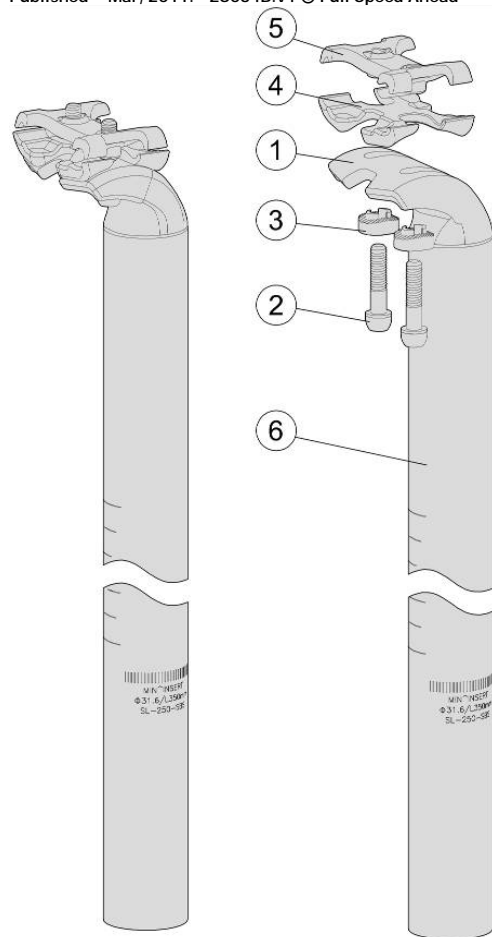

Introduction

Congratulations on your Full Speed Ahead product. Please read these instructions and follow them for correct use. Failure to follow the warnings and instructions could result in damage to product not covered under warranty, damage to bicycle; or cause an accident resulting in injury or death. Since specific tools and experience are necessary for proper installation, it is recommended that the product be installed by a qualified bicycle technician. FSA & Vision assumes no responsibility for damages or injury related to improperly installed components.

Warranty

Full Speed Ahead (FSA) warrants all FSA, Gravity, Vision, Metropolis and RPM products to be free from defects in materials or workmanship for a period of two years after original purchase unless otherwise stated in the full warranty policy. The warranty is non-transferable and valid to the original purchaser of the product only. Any attempt to modify the product in any way such as drilling, grinding, and painting will void the warranty. For more information on warranty policy and instructions for completing a warranty claim, check out the Full Warranty Policy found at our website:

<http://www.fullspeedahead.com/support/warranty-policy/>

Specification

Item Number / Model Name	SP-RK-260-SBS / SL-K SB25 SBS
Item Number / Model Name	SP-SL-240-SBS / Carbon Pro CSI SB25 SBS
Item Number / Model Name	SP-SL-250-SBS / SL-250 SBS
Item Number / Model Name	SP-SL-250-SBS/White / SL-250 SBS – White
Item Number / Model Name	SP-SL-270-/CW-UD-SBS / Team Issue SBS SB20 / UD

Components

Follow the assembly order in the illustration:

① Seatpost Head	③ Alignment Washers x2	⑤ Upper Clamp x1
② Saddle Clamp Bolts x2	④ Lower Clamp x1	⑥ Seat Pillar

Seatpost Installation

1. Verify with the seatpost is correct diameter for frame seat tube. Installing incorrectly sized seatpost will result in damage and failure of seatpost and frame.
2. Remove burrs or sharp edges with sandpaper or a seat tube hone tool. Make sure seat tube is clean and free of debris or other sharp edges.
 - ⚠ WARNING** Any sharp edges in the seat tube or seatpost clamp can cut into the carbon creating a stress point that may cause the post to fail unexpectedly while riding resulting in damage to bicycle, injury, or death. Inspect the seatpost regularly in clamp area for signs damage or cracking. Discontinue riding and replace cracked seatpost.
3. Apply Dynamic Installation paste (supplied with carbon seatpost) on inside of seat tube and on the seat pillar ⑥.
4. Insert Seatpost into seat tube to desired height.
 - ⚠ WARNING** Make sure minimum insert line (MIN^INSERT) is below the top of seat tube. Failure to do so may result in damage to seatpost or frame and cause an unexpected failure resulting in an accident causing injury or death.
 - ⚠ WARNING** Do NOT use twisting motion to insert or remove seatpost. Corners of the seat tube can scratch the carbon while installing or removing the seatpost creating a stress point that may cause the post to fail unexpectedly while riding resulting in damage to bicycle, injury, or death.
5. Tighten seatpost clamp to 30-50 kgf.cm / 3-5 Nm / 26-45 in.lbs. Do NOT tighten seat clamp above 50 kgf.cm / 5 Nm / 45 in.lbs.
 - ⚠ WARNING** Tightening the seatpost clamp above 50 kgf.cm / 5 Nm / 45 in.lbs. can damage the seatpost which can cause unexpected failure while riding bicycle resulting in damage to bicycle, injury, or death. If at 50 kgf.cm / 5 Nm / 45 in.lbs. the seatpost is not secure, contact FSA for troubleshooting before tightening to higher torque.
6. To install the saddle, loosen the saddle clamp bolts ② until rails of saddle frame can fit between lower clamp ④ and the upper clamp ⑤. Adjust saddle to angle and position desired on saddle rails. Once desired saddle position is achieved, tighten saddle clamp bolts ② ½ turn each, alternating between the bolts until they reach a torque of 88 kgf.cm / 8.8 Nm / 78 in.lbs. simultaneously. Make sure there is a light amount of grease on bolt threads.

Contact

If you have questions, please visit our web site technical section: <http://www.fullspeedahead.com/support/> or contact:

Full Speed Ahead, USA
12212 Cyrus Way Mukilteo, WA 98275-5702
Tel: 1_425_488_8653 Fax: 1_425_489_1082

Full Speed Ahead, Europe
Via Del Lavoro, 56 20874 Busnago, Milan, Italy
Tel: +39_039_688_5265 Fax: +39_039_682_3336

TH INDUSTRIES / FSA Asia
NO.6, Wu-gong 8th Rd., Wufeng Dist., Taichung City 41353, Taiwan (R.O.C.)
Tel: +886_4_2331_9134 Fax: +886_4_2331_9314