


Vision Rear Hydration System Installation Instructions

Published – Jan, 2016. ZS182.v0 © Full Speed Ahead

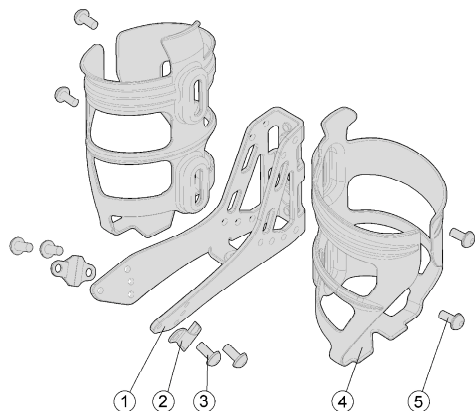

Hydration System Mount Installation:

1. Align rear hydration system rack ① between the back of the saddle rails (Fig.1).
2. Choose the bolt hole pattern which will place the rack at the highest angle behind the saddle and loosely attach the rack to the saddle rails using saddle rail clamp ② and M5 bolts ③.
3. Position the rack as desired on the rails and tighten the M5 bolts to 60 kgf.cm / 6Nm / 53 lb.in.
4. Position the bottle cages ④ using the bolt hole configuration that places the cages at the optimized angle needed for clearance and reach. Using M5 bolts ⑤, loosely fasten the cages to the rack and recheck the cage position. Tighten the bolts to 30 kgf.cm / 3Nm / 26 lb.in.
5. Periodically recheck bolt torque. Retighten as needed.

Co2 System:

The Vision Rear Hydration System includes built-in features that accommodates CO2 inflators and cartridges.

1. Screw threaded Co2 cartridges in to the two M8 threaded holes in the back of the rack (Fig. 2). Firmly tighten by hand.
2. Thread inflator on to the M8 threaded stud on the bottom of the rack (Fig. 3). Firmly tighten by hand.

Introduction

Congratulations on your Vision product. Please read these instructions and follow them for correct use. Failure to follow the warnings and instructions could result in damage to product not covered under warranty, damage to bicycle; or cause an accident resulting in injury or death. Since specific tools and experience are necessary for proper installation, it is recommended that the product be installed by a qualified bicycle technician. FSA & Vision assumes no responsibility for damages or injury related to improperly installed components.

Warranty

Full Speed Ahead (FSA) warrants all FSA, Gravity, Vision, Metropolis and RPM products to be free from defects in materials or workmanship for a period of two years after original purchase unless otherwise stated in the full warranty policy. The warranty is non-transferable and valid to the original purchaser of the product only. Any attempt to modify the product in any way such as drilling, grinding, and painting will void the warranty. For more information on warranty policy and instructions for completing a warranty claim, check out the Full Warranty Policy found at our website: <http://www.visiontechusa.com/support/warranty-policy/>

Specification

Item Number / Model Name V0138 / Metron Rear Hydration System
V0134 / Trimax Rear Hydration System

Components

Follow the assembly order in the illustration:

- | | | |
|------------------------------|--------------------|-----------------|
| ① Rear Hydration System Rack | ③ M5 Bolts (x4) | ⑤ M5 Bolts (x4) |
| ② Saddle Rail Clamp (x2) | ④ Bottle Cage (x2) | |

Fig. 1

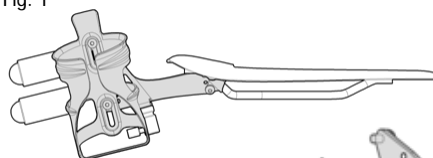


Fig. 2


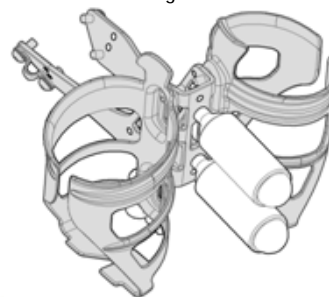


Fig. 3

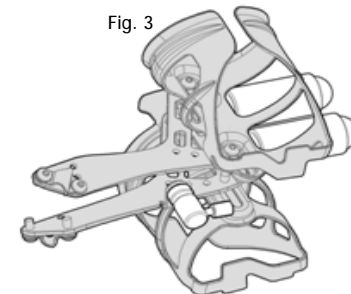

Contact

If you have questions, please visit our web site technical section: <http://www.fullspeedahead.com/contact> or contact:

Full Speed Ahead, USA
12212 Cyrus Way Mukilteo, WA 98275-5702
Tel: 1_425_488_8653 Fax: 1_425_489_1082

Full Speed Ahead, Europe
Via Del Lavoro, 56 20874 Busnago, Milan, Italy
Tel: +39_039_688_5265 Fax: +39_039_682_3336

TH INDUSTRIES / FSA Asia
NO.6, Wu-gong 8th Rd., Wufeng Dist., Taichung City 41353, Taiwan (R.O.C.)
Tel: +886_4_2331_9134 Fax: +886_4_2331_9314